










Where do I put the tablet?


Cabinets are different.



Luckily, the tablet suits all cabinets.

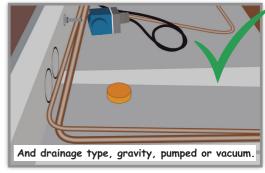

It can go anywhere in the pan.

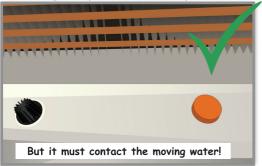

Coating all surfaces as it dissolves.



Biofilm is a problem in the drains.



One tablet One cabinet 6 months protection

Gel-clear tablets will sometimes dissolve completely, this is normal, they work by coating the drains in a long lasting antimicrobial shield.

If some tablet remains after six months, it does not need to be removed, clean the cabinet as usual, and replace with a new tablet.

2 01254 760002



info@gel-clear.co.uk | ⊕ www.gel-clear.co.uk













Technical data sheet QP24





Gel-clear tablets dissolve in the condensate waste water, coating the drains in an antimicrobial protective layer preventing Biofilm formation along the whole dispersive route in any drainage system

Name	Gel-clear
Product Code	QP24
Packing Qty	14 tablet tube
Tablet appearance	Orange Solid Disc

SPECIAL FEATURES

- · 6 months protection
- NSF approved
- · Pump safe
- · Non-corrosive to metals
- · 100% biodegradable
- · No ecological toxicity





DESCRIPTION

Gel-clear tablets prevent the formation of biofilms in HVACR drainage systems. Suitable for every type of drainage configuration, Gel-clear tablets reduce breakdowns, and improve drainage efficiency. Using a unique, proprietary coating method, Gel-clear tablets outlast conventional condensate treatments.

Gel-clear QP24 tablets are safe & simple to use. Placed in the drain pan. they slowly dissolve, coating all the drains in the 'Gel-clear' antimicrobial shield. Gel-clear tablets are 100% water soluble, suitable for all types of condensate pumps, giving protection to the pump and discharge line, from the effects of biofilm. User Guide

DIRECTIONS

For HVAC professional use only,

Place the tablet away from the drain outlet, anywhere between the coil and the drain outlet. It is important only that the tablet comes into contact with the moving water. The tablet will completely dissolve, coating all the drains. The tablet does not have to remain visible, the coating protects the drains, preventing microbial attachment,

Contains, Quaternary ammonium compounds, C12-14-alkyllethylphenyllmethyl dimethyl, chlorides;
Quaternary ammonium compounds, benzyl-C12-18-alkyllmethyl, chlorides, 1902- Hammful I swellbowd
H315 - Guases shir invitation H316 - Couses senious eye demage, P280 - When rey protection, foce protection, protect
gloves, P301-P312 - IF SWALLDWED. Call a POISON CENTRE or doctor if you feel unwell, P302-P362 - IF ON SKN
Wash with plenty of soap and water P305-P361-P361 - IF IN PYES: Rinse cautiously with vater for several minutes,
Remove contact. lenses, if present and easy to di, Continue ninsing, P310 - Immediately call a POISON CENTRE or doctor.

P392-P3934 - 140 of rontaminated clothin and vase it hefore never p876-11. Rissoned contacts/containers to hazardo P362+P364 - Take off contaminated clothing and wash it before rause, P501 - Dispose of contents/contain or special waste collection point, in accordance with local, regional, national and/or international regulation

2 01254 760002





info@gel-clear.co.uk | ## www.gel-clear.co.uk